


ELEVATE

Hood Grille Installation

* * * Installation of this product should be done by an individual experienced in sheet metal cutting and fabrication. Please read through these instructions before beginning. * * *

1. Disassemble the three main elements:
 - Top Frame (frame with studs protruding)
 - Grille Insert (grille material)
 - Bottom Frame (frame with holes only)
2. Place the Bottom Frame on the hood in desired position. Measure from the forward-most corner of the Bottom Frame along the ridge of the hood to the front of the hood. This length should be 12" (31 cm) if you are fitting over the ELEVATE Air Management System. Otherwise, position wherever desired.

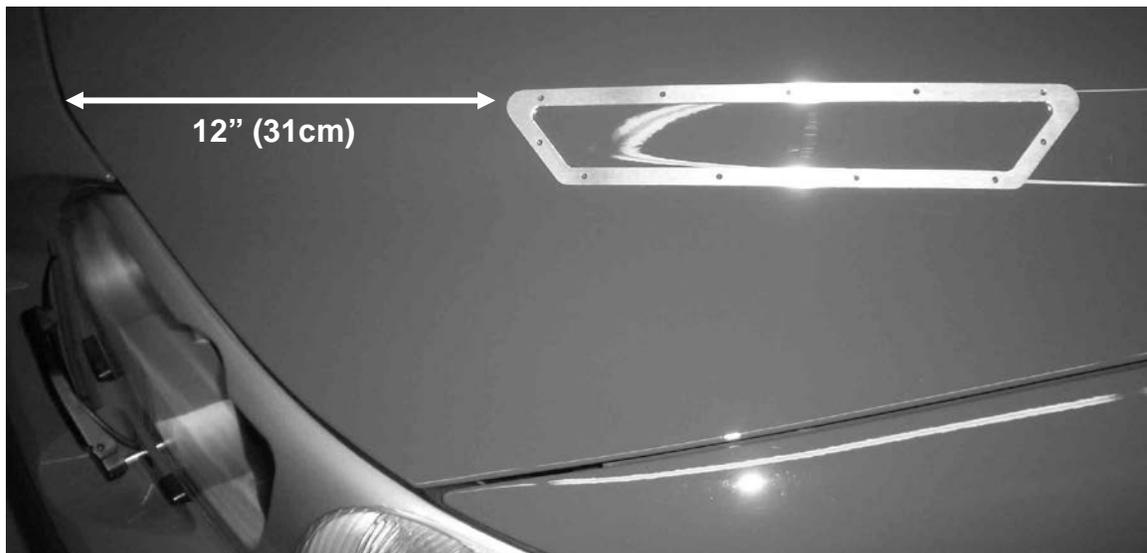

3. Using the Bottom Frame as a template, mark where the material needs to be removed using the INSIDE perimeter of the Bottom Frame.
4. Open the hood and remove the hood insulation.
5. Using a suitable tool, cut an area the size of the opening of the Bottom Frame. Enlarge the hole as needed to accommodate the studs from the Top Frame passing through.
6. With the hood open, cut out a section of the inner support as needed. This cut out will be larger than the opening on top to allow access to the studs.
7. Assemble components in this order:
 1. Top Frame on top of the hood
 2. Grille Insert on the bottom side of the hood
 3. Bottom Frame underneath the Grille Insert
8. Use nuts with washers to sandwich the components together, tightening in a sequence to smoothly pull the pieces flush with the hood. An extra washer and nut are included should one get lost.

*** * * DO NOT OVERTIGHTEN NUTS AS THIS COULD RESULT IN DAMAGE TO TOP FRAME BY PULLING THE STUDS THROUGH THE TOP FRAME * * ***

9. Cut a section of the hood insulation out to accommodate opening or leave hood insulation off altogether.
10. Check tightness of nuts occasionally.